



THE MOTORVATOR

(2005-2006 FORD MUSTANG 4.6L V-8 PART # 5233-5234)

IMPORTANT! READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION

DISCONNECT THE INTAKE AIR TEMPERATURE SENSOR (IAT) ON AIR INDUCTION TUBE. DISCONNECT THE CRANKCASE VENT TUBE.

DISCONNECT THE THROTTLE POSITION SENSOR (TPS) AND FLY-BY-WIRE(FBW) HARNESSSES FROM THROTTLE BODY. REMOVE THE FOUR BOLTS FROM THROTTLE BODY AND REMOVE THROTTLE BODY.

INSTALL THE MOTORVATOR THEN THE GASKET, THROTTLE BODY WITH LONGER BOLTS AND WASHERS PROVIDED IN THE KIT. TIGHTEN DO NOT OVER TIGHTEN!

RECONNECT FBW AND TPS HARNESSSES TO THROTTLE BODY.

INSTALL AIR INDUCTION TUBE ONTO THROTTLE BODY.RECONNECT IAT SENSOR AND CRANKCASE VENT TO AIR INDUCTION TUBE.

PART LIST

**1 MOTORVATOR
1 GASKET
4 6MM X 60MM BOLTS
4 6MM LOCK WASHERS
4 6MM FLAT WASHERS**

**MOTORVATION
2875 HANGAR RD.MEMPHIS, TN. 38118
PH # 901-821-0033 FAX # 901-821-0032
MOTORVATION.TV**