





Motorvation Module Installation Instructions (1999-2003 Ford 7.3L Powerstroke)

Important! Read all instructions before you begin installation.

1. Make sure the Ignition switch is turned off.
2. Locate OEM Engine Control Computer in the driver side kick panel
3. Using a 10mm socket and loosen the bolt that connects the wiring harness to the OEM Engine Control Computer. (Turn Counter Clockwise to remove). This bolt is located in the engine compartment attaching the harness to the Computer through the firewall.

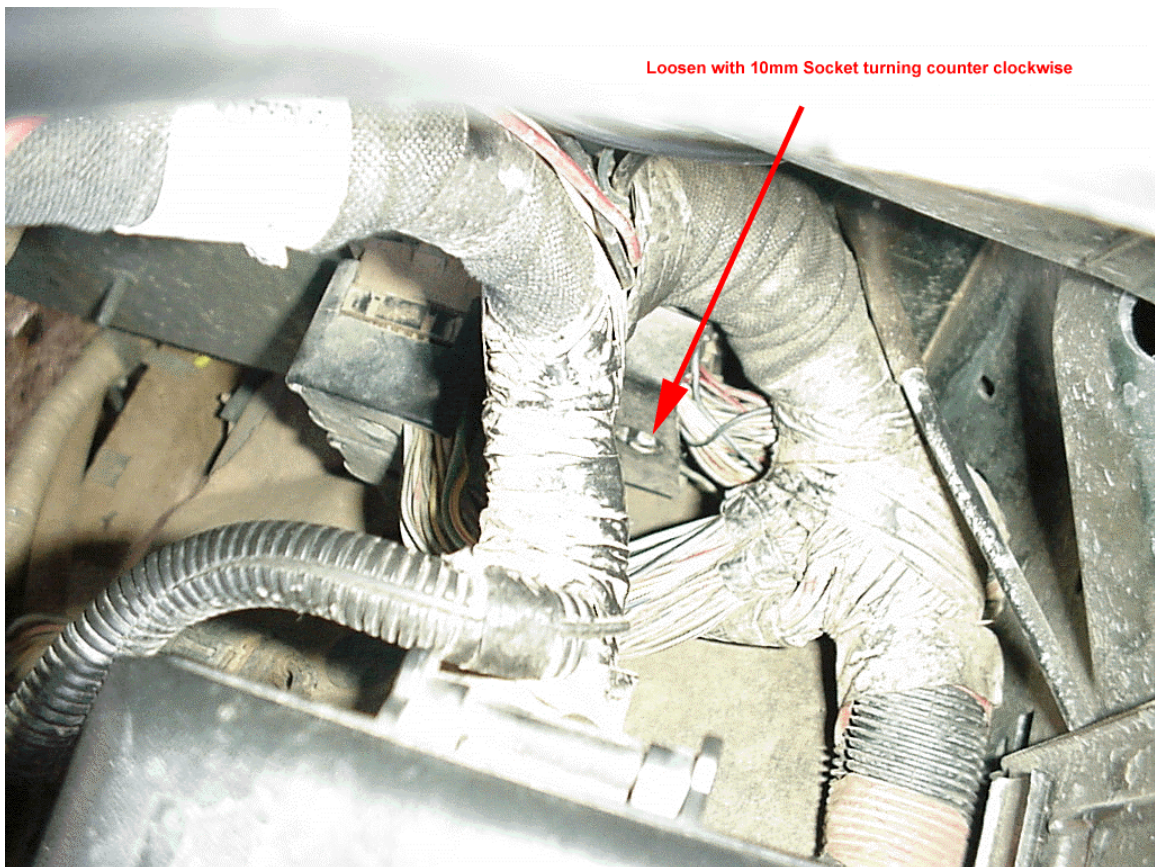

4. Using a 8mm socket remove the two screws that secure the black plastic Engine Controller shroud

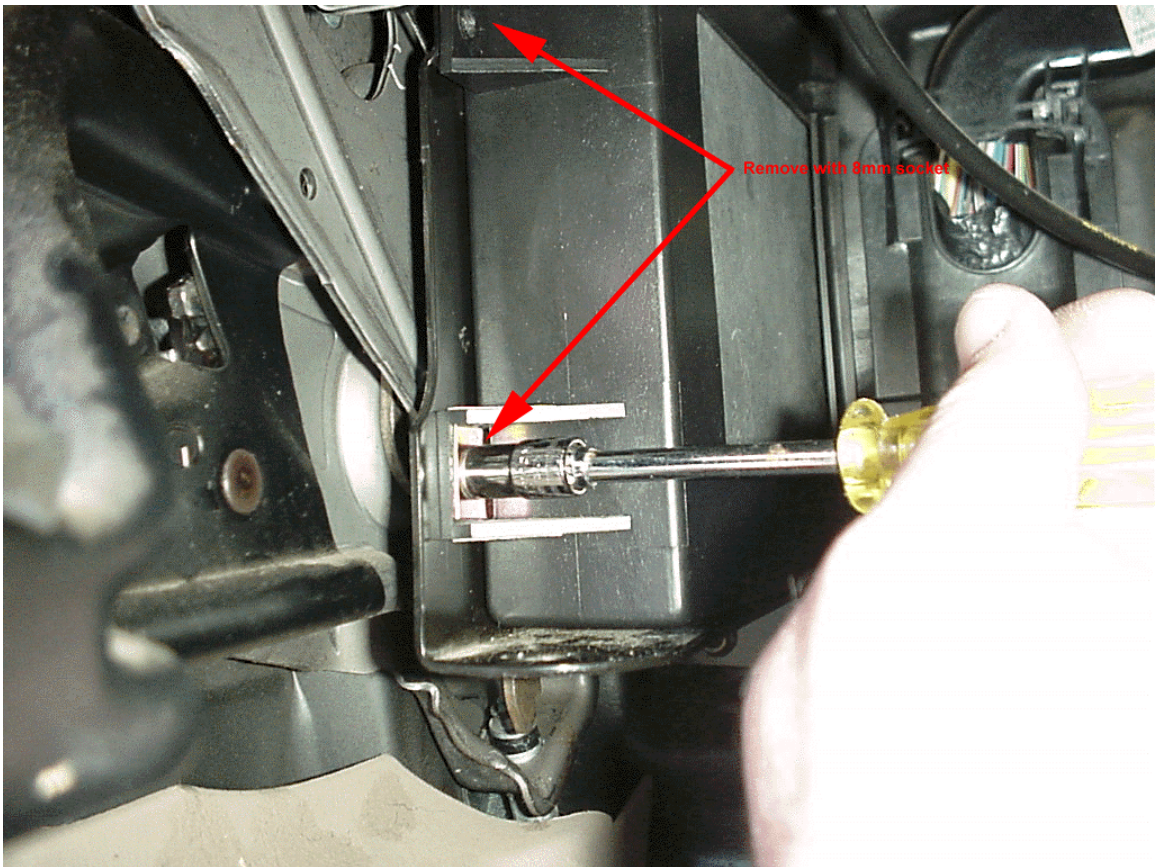

5. Remove Shroud and Engine Controller by pulling lightly down and away from the firewall



6. Using a 6mm socket, remove the 6 screws and remove the top of the engine controller.
7. Using the Scotchbrite that is included with you MotorVator Module, clean the edge connector (both sides). **Note: *you must clean all of the grease and conformal coating to allow the edge connector to have good contact.***




8. Insert MotorVator Module on the Engine Controller edge connector.



9. Re-install engine controller top and tighten screws.

10. Inert engine controller into the plastic shroud and install the two 8mm screws making sure the metal spacer is still in place.

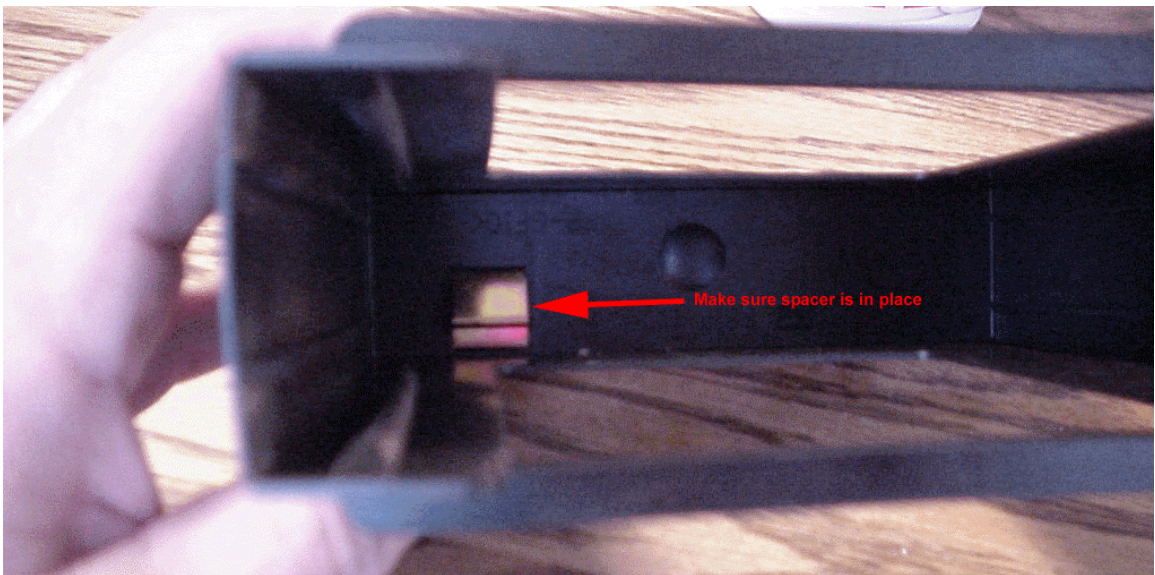

11. Re-install wiring harnesses to the engine controller and tighten the 10mm screw.

12. Insert key in the ignition switch and turn key to on position and then turn to start. If the engine does not start after several engine rotations then you must re-check the module part number and make sure the conformal coating and grease have been removed from the engine controller edge connector.

NOTE: MUST HAVE A RETURN GOODS AUTHORIZATION NUMBER (RGA) BEFORE RETURNING PRODUCTS.

**MOTORVATION
2875 HANGAR RD. MEMPHIS, TN. 38118
PH # 901-821-0033 FAX # 901-821-0032
MOTORVATION.TV**